


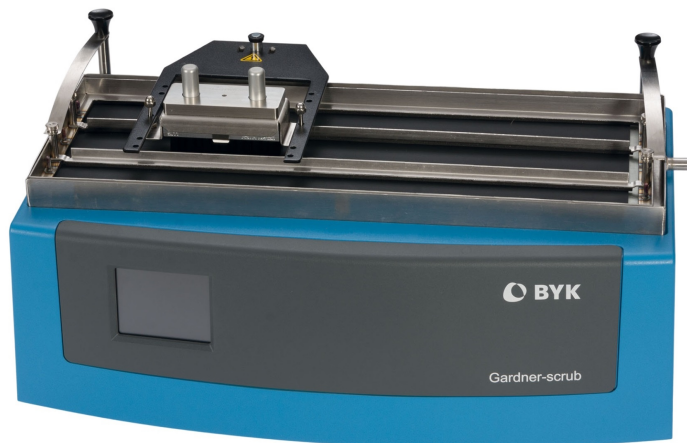

Gardner-scrub

Abrasion Tester


Operating Manual

Table of Contents

1 Overview.....	4
2 Safety Instructions.....	5
3 System Description	6
4 Preparation / Setup	7
5 Start-up	10
6 Operation.....	12
7 Maintenance.....	14
8 Declaration	16
9 Appendix	17
9.1 ASTM Test Setup - Part Number 5064	17
9.2 ISO Test Setup - Part Number 5065	18
9.3 DIN Test Setup - Part Number 5066.....	19
10 Technical Data	20

1 Overview

Gardner-scrub

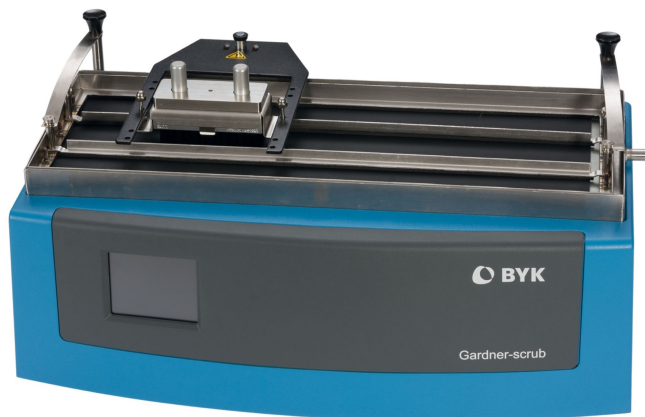

5061

BYK - Gardner USA

9104 Guilford Road, Suite H
Columbia, MD 21046
United States

Phone 800-343-7721
301-483-6500

Fax 800-394-8215
301-483-6555

BYK-Gardner GmbH

Lausitzer Str. 8
D-82538 Geretsried
Germany

Tel. 0-800-gardner
(0-800-4273637)
+49-8171-3493-0

Fax +49-8171-3493-140

<https://www.byk-instruments.com>

2 Safety Instructions

**Caution!**

Read this operation manual before using this instrument.

**Warning!**

This manual cannot address all the safety considerations associated with its use. It is the responsibility of the user to consult this manual and establish appropriate safety practices for use with this equipment and the individual material being tested.

**Warning!**

The Gardner-scrub Abrasion Tester is designed and intended for the use described in this manual. Using the Abrasion Tester for other purposes for which it was not designed may reduce or eliminate the protection offered by the features of the applicator. Serious injury may result.

**Warning!**

Never defeat the ground conductor or operate the equipment in the absence of a suitably installed ground conductor. Contact the appropriate electrical inspection authority or an electrician if you are uncertain that suitable grounding is available.

**Warning!**

Ultimate disposal of this product should be handled according to all national laws and regulations.

**Attention!**

The Gardner-scrub Abrasion Tester works with a moving traverse carriage. No parts of the carriage may be touched or held during operation. Once the "Run" button is pressed no work should be carried out within the travel area of the carriage.


Please note the following points:

- During testing operation the carriage oscillates across the top surface of the instrument.
- Familiarize yourself with the layout and operation of the controls.
- Pressing anywhere on the screen while the instrument is running will immediately stop the carriage at any point of its travel.
- Ensure the operator has no loose clothing or jewelry which could become caught in the moving parts.

3 System Description

The Gardner-scrub Abrasion Tester helps evaluate washability and abrasion resistance of a material. The tester reciprocates an abrasive device linearly over a sample. The abrasion device can be a brush, sponge, abrasive pads, and other abraders. The traversing carriage is designed to hold 1, 2 or 3 abrading devices depending on their size.

Two sample clamps slide on shafts at the rear of the instrument to allow various sized samples to be held in place during testing. The clamps will also hold "Lilly Frames" or other accessories in place.

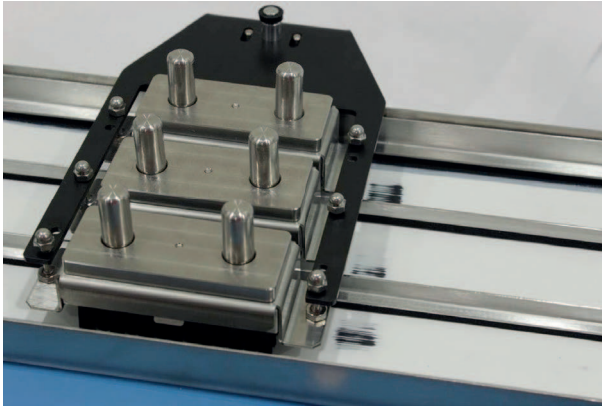

Gardner-scrub with 3 ASTM brush boxes mounted

The Gardner-scrub incorporates a precise speed control to maintain a constant speed for the test. The instrument is preset at 37 strokes per minute to coincide with most standardized tests but may be adjusted within the range of 6 to 60 strokes per minute. Unlike some other instruments on the market, the Gardner-scrub maintains a linear speed over its travel length. The result is a more consistent and repeatable test.

A front mounted, color touch screen is provided for user interaction. All adjustments are available in the setup screen to provide a flexible interaction with the user.

The instrument is setup at the factory for a center-to-center stroke length of 10 inches. Stroke lengths of 9 or 11 inches may be achieved by means of a mechanical adjustment. This adjustment must be performed by the factory or an authorized service center.

4 Preparation / Setup

Unpack the unit being careful to check all packaging for items. Some accessories required for specific tests may be found in a separate box within the main box.

Within the package are the following standard items.


Quantity	Description
1	Gardner-scrub main unit
1	Power supply
1	Power cord
1	Drip pan
2	Sample clamp springs

Perform following steps:

1. Find a suitable location free from obstructions and clutter. The Gardner-scrub should be at a convenient height for the operator.
2. Plug the power supply into the DC input jack on the left side, next to the power switch. A power cord appropriate for your area's power connector is supplied to connect the power supply with AC power. The system will operate on power from 100-240 V at 50-60 Hz.
3. Using the bubble level on the top of the cover, adjust the 4 feet on the bottom of the unit to level the instrument to the work surface.
4. Place the drip pan in the provided indentation on top of the unit.

There are two sample clamp springs provided in the unit. The two springs are used to tighten the sample plate.

Screw the knobs into the shafts located at the back corners of the unit until you can lift the shaft to its full extension. Then tighten the knob fully.

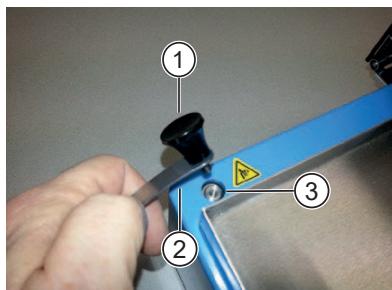


Push the knob (1) into the spring (2) and attach both to the shaft.

The shaft is placed completely in the housing (3).



Screw the knob into the shaft.

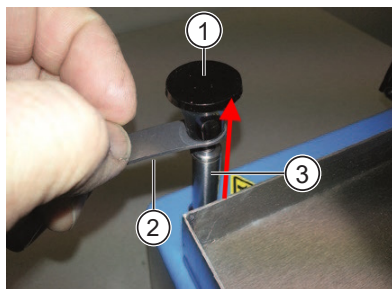


Lift the spring (2) to pull out the shaft (3) completely.

Alternative use the knob (1) to lift the shaft.




Grasp the shaft and tighten the spring to the knob fully.

Alternatively attach just the knob to the shaft, pull the shaft out of the housing and attach the spring afterwards.

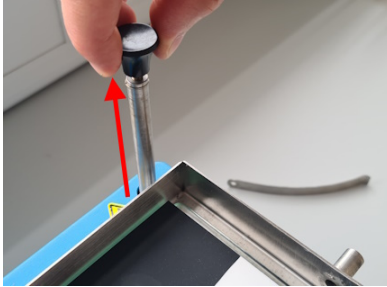


Attach the knob to the shaft.
Screw the knob into the shaft.
Pull the shaft out of the housing.

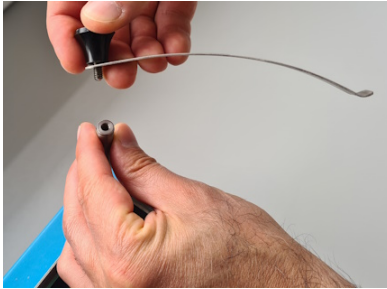

Remove knob to attach it along with the spring to the shaft.



Screw the knob into the shaft completely to tighten the spring.
Insert the shaft back into the housing.

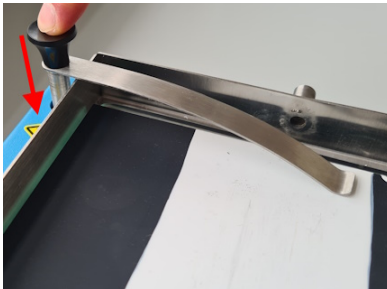


Press on the knob the insert the shaft completely into the housing.

For a small video please see: <https://media.byk-instruments.com/shop/Misc/Videos/gardner-scrub/Gardner-scrub-Attach-Knop-Spring-Shaft.mp4>


5 Start-up

Plug the external power supply into the connector on the rear of the instrument near the power switch. Plug the other end into an appropriate electrical outlet as described in section [“Preparation / Setup \[▶ 7\]”](#).

Turn on the power switch. The power switch is located on the rear of the instrument, near the power cord.

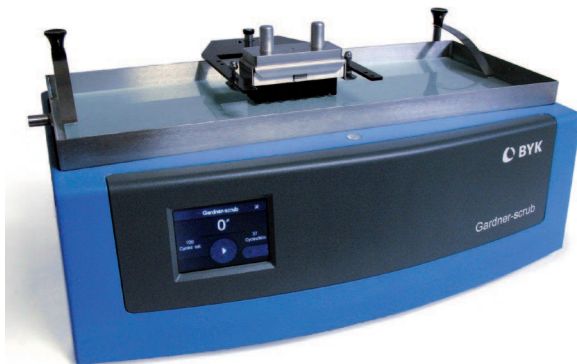


The front LCD display will illuminate, the instrument is now ready to operate. All user interaction is through the touch screen LCD.

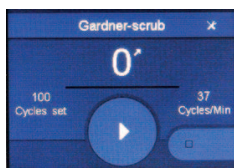


The “Home” screen

The large number in the center indicates number of counts, the small arrow indicates whether the unit is counting up or down from the cycles set number. The cycles set indicates how many cycles the instrument is programmed to run. The “Cycles/Min” indicates the programmed speed. The large round button in the middle is the “Start” button to begin the test. The small icon in the upper right corner is the tool icon to get to the “Setup” screen.

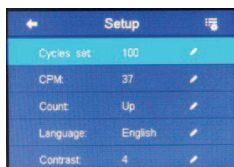

“Setup” screen


Press the tool icon on the “Home” screen to access the “Setup” screen. Note the current settings. Press the band you wish to change and it will turn blue. Press once more to access the screen to change the setting. Press the “Cycles set” area to access this screen.

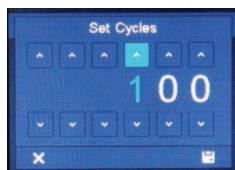**"Set Cycles" screen**

Adjust the number of cycles that will be run without stopping on this screen. Press the appropriate up or down arrow to adjust each digit. The instrument will run up to 100,000 cycles. Once the desired number of cycles is set, press the "Save" icon in the lower right of the screen to return to the "Setup" screen. The "X" in the lower left will exit the screen with no changes saved.

**"Set CPM" screen**

This screen allows you to adjust the cycles per minute or speed of the instrument. All current test methods use 37 CPM however you can change this number for using the instrument for nonstandard accelerated or other special testing. The maximum speed allowed is 60 CPM. Touch "Save" or "Exit" to return to the "Home" screen.

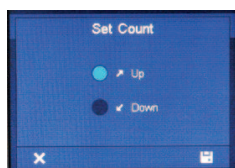**"Set Count" screen**

This setting allows the instrument to count up or down from the number of cycles set previously. The default is counting up from zero. If you would like the system to count down from the set point select "Down". Touch "Save" or "Exit" to return to the "Home" screen.

**"Set Language" screen**

Touch the language you wish to use. There are 8 languages to choose from. Touch "Save" or "Exit" to return to the "Home" screen.

**"Set VCOM" (contrast) screen**

Touch the button "Up" and "Down" to view the different contrast settings available. Touch "Save" or "Exit" to return to the "Home" screen.

6 Operation


Specific brushes, holders or other apparatus are specified in the various international standards and those should be referenced to setup the appropriate test parameters.

The carriage is designed to accommodate several different brush, sponge, and abrasive pad holders.

Multiple holes are provided to allow one, two or three holders at the same time.

Multiple holder options are limited to the size of the holder.

Currently, the unit will accommodate up to 3 standard brush holders, up to 3 abrasive pad holders or up to 2 sponge holders.

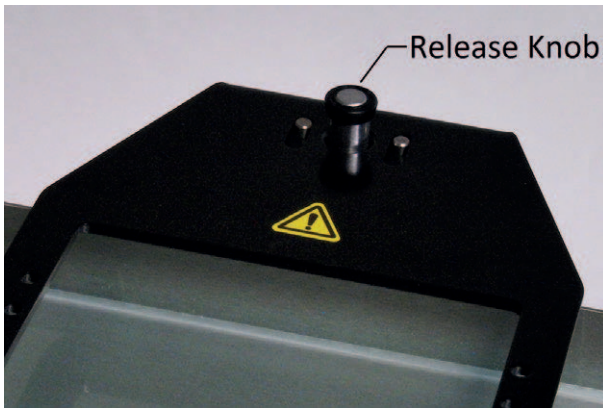


The holder is released by lifting the black knob located at the rear center of the holder.

For convenience, the holder may be completely removed by squeezing the two pins on the hinge together.

Install your desired abraders, the test sample, and any liquids in the test pan.

You are now ready to begin testing!

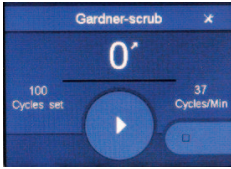

On the "Home" screen press the large "Start" button to start testing. Once you press this button the screen will change to the "Run" screen.




When the "Start" button is pressed, the screen changes to the "Run" mode. The "Start button" turns blue and is now a "Pause" button. The "Stop" button is now active and is indicated by the red square. The "Progress" bar is in blue to help indicating how far along the test has run. To pause operation without resetting the counter, press the large blue "Pause" button. To stop operation and reset the counter, press the red square area with the "Stop" button.



When the "Pause" button is pressed (or anywhere except the "Stop" button area) the "Pause" screen will appear. To resume the test just press the yellow "Run" button. In our example the counter is stopped at 20 cycles on its way to a total of 100 cycles. Note the "Progress" bar is also yellow. Pressing the "Start" button will continue from where the test was stopped. Pressing the "Stop" button will stop the test and reset the counter.

As a safety measure, the instrument will stop and be placed in "Pause" mode if the screen is touched anywhere except the "Stop" button area. This is an "Emergency Stop" feature. As described above, the count will reset, and the system will stop if the "Stop" button is pressed.

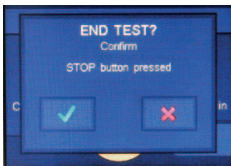

Pressing the "Stop" button also erases the current number of counts and resets the counter to zero (in count up mode) or to cycles set (in count down mode). A confirmation screen asks to confirm the "Stop" and reset operation.

7 Maintenance

Cleaning and Routine Maintenance

Care should be taken to avoid letting abrasion materials spill from the pan. If spillage occurs, clean the covers with mild soap and water as soon as practical. If abrasive substances are spilled on the LCD display clean it with mild soap and water. This includes a glass surface so take care not to use excessive force. Avoid solvents on the cover and the LCD as they may be seriously damaged by strong solvents.

Troubleshooting

If the carriage becomes jammed the instrument will stop and report an error message. If this occurs, turn off the power, remove the power connector from the rear of the unit and clear any visible jams. Once cleared, replace the power connector, and turn on the instrument. If a jam is still indicated, contact your local BYK-Gardner office for assistance.

Service and Spare Parts

The instrument does not contain any operator serviceable parts. For all service and spare parts requirements, please contact your local BYK-Gardner office.

Ordering Information

Components

Part No.	Description
5060	Gardner-scrub Abrasion Tester basic instrument
5061	Gardner-scrub Abrasion Tester equipped for ASTM
5062	Gardner-scrub Abrasion Tester equipped for ISO
5063	Gardner-scrub Abrasion Tester equipped for DIN

Recommended Accessories

Part No.	Description
2230	Dow Latex Film Applicator, U Shape
5010	DIN Brush
5011	Nylon Brush ASTM D 2486
5012	ISO Scotch-Brite Pads (Package of 50)
5015	byko-chart Black Scrub Test Panels
5016	byko-chart White Scrub Test Panels
5037	Liquid Metering System
5038	Lilly Frame D 2486
5039	Glass Panel
5041	Sample Pan with Drain Outlet
5058	Sandpaper Holder
5059	ISO Arm Adapter
5070	ASTM D 4213 Scotch-Brite Pad
5071	Polyurethane Sponge ASTM D 4213
5072	Sponge Holder ASTM D 4213 450g
5073	Sponge Holder ASTM D 4828/D 3450 1000g
5074	ASTM Brush Holder and Mat
5075	DIN Brush Holder and Mat
5076	ISO Pad Holder
5077	Sponge B (Cellulosic) 1.5 x 3.5 Inch (fits Brush Holder 5074)
5078	500g Weight (additional weight for brush or sponge holder)
5079	1000g Weight (additional weight for brush or sponge holder)
5093	Holding Clamp/Burette Assembly
6979	Brass Shim
6980	Glass Plate
8111	Hog Bristle Brush
8113	Hog Bristle Brush, Perforated
8116	Cellulose Sponge ASTM D 4828 and D 3450
8117	Sandpaper Attachment Kit
8118	Weight for Sandpaper Holder
8129	Scrub Medium Abrasive ASTM D 2486
8130	Scrub Medium Non-abrasive ASTM D 3450

8 Declaration

We,

BYK-Gardner USA
9104 Guilford Road, Suite H
Columbia, MD 21046 USA

herewith declare that the product

- **Gardner-scrub**

complies with the requirements of the following EU directives:

- 2014/30/EU - Electromagnetic Compatibility (EMC)

The following harmonized standards were applied:

- EN 61010-1:2010/A1:2019 - Safety requirements for electrical equipment for measurement, control, and laboratory use
- EN IEC 61326-1:2021 - Electrical equipment for measurement, control, and laboratory use - EMC requirements

March 26, 2025 BYK-Gardner USA



Timothy A. Cassell
President and General Manager




EC - Declaration of Conformity

9 Appendix

9.1 ASTM Test Setup - Part Number 5064


The ASTM brush and holder is easy to install and quite versatile. This guide is intended to help set up the Gardner-scrub for use with the ASTM standards. Please refer to specific standard for a complete description of the test method.

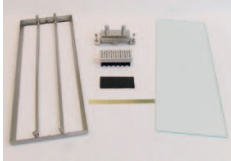


Pictured are the parts that come with the ASTM accessory kit. On the left is the Lily Frame with two configurable dividers, in the center from top to bottom are the brush holder, brush, brush pad and brass shim. On the right is the glass plate.



This photo shows the brush and holder. The holder is attached to the Gardner-scrub by removing the two acorn-head nuts on the brush holder. Then slip the posts into the desired holes on the carriage arm. Reattach the nuts to retain the brush holder when the arm is lifted.

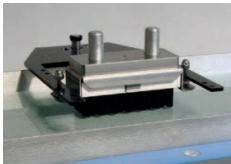

A single brush should be mounted in the center holes of the arm. Multiple holes are provided to allow single, 2 brush or 3 brush operation. The "Lilly Frame" can be adjusted by moving the dividers to allow various combinations of brushes.

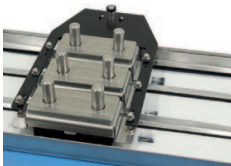

Up to three brushes may be used at the same time.



Additional weights of 500 and 1000 grams are available to put extra pressure on the brush to speed failures on tough coatings. However, these weights fall outside of the ASTM specifications. The weight slides onto the pins of the brush holder.


NOTE: Additional weights may not be compatible with all brushes, test your brush with extra weight before committing to a change in your test specifications.

9.2 ISO Test Setup - Part Number 5065


The ISO accessory kit includes an adapter and pad holder for using abrasive pads with the Gardner-scrub. This guide is intended to help the user set up the Gardner-scrub for use with the ISO standards. Please refer to specific standard for a complete description of the test method.



Pictured are the parts that are included with the ISO accessory kit. The adapter plate is shown on the left and a single pad holder and pad are shown on the right. Note that the adapter will accommodate one, two or three pad holders at the same time. The kit includes one pad holder. Additional pad holders may be purchased from BYK-Gardner.

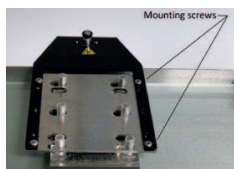

The ISO Adapter Plate must be installed on the Carriage Arm. Four (4) screws are provided in the kit. Once the Adapter Plate is attached it can remain in place. Note the hole configurations. Users can place one, two or three pad holders on the Gardner-scrub.

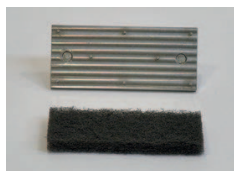

On the bottom of the pad holder are a series of pins. These pins help hold the pad in position as the Gardner-scrub moves. To use, lay the pad on the sample surface and firmly press the pad holder down on top of it. Make sure the entire pad is underneath the holder. Then lower the carriage arm onto the pad holder and start the test.

9.3 DIN Test Setup - Part Number 5066

The DIN accessory kit includes all of the additional parts needed to use the Gardner-scrub for DIN 53778. This guide is intended to help the user set up the Gardner-scrub for use with this DIN method. Please refer to specific standard for a complete description of the test method.



Pictured is the DIN brush holder and brush. The combination weighs 250 grams in the dry state as required by the specification. Please review section “ASTM Test Setup - Part Number 5064 [▶ 17]” for instructions on the brush holder installation.



Also included is a burette and stand to meter liquid into the pan during the test. The stand must be assembled by clamping the vertical rod into the base, then sliding the burette clamp in place and tightening the thumbscrew. The burette then can be filled with the appropriate solution and placed in the clamp. Tighten the clamp with just enough force to hold the burette securely. Do NOT over tighten!

Position the assembly to allow the burette to drip into the pan along the test area. Adjust the valve of the burette to obtain the desired flow rate.

The Gardner-scrub will support up to 3 DIN brush assemblies at one time. For additional brush holders use part number 5075. To order an additional clamp and burette assembly use part number 5093.

10 Technical Data

Temperature range	1 °C - 40 °C (35 °F - 104 °F) for operation -18 °C - 66 °C (0 °F - 150 °F) for storage
Relative humidity	Up to 85% non-condensing at 35 °C (95 °F)
Operation altitude	Up to 2.000 m (6.561 ft)
Area of use	For indoor usage; dry locations only
Pollution degree	2
Overvoltage category	I
Dimensions (LxWxH)	485 x 279 x 196 mm (19,1 x 11 x 7,7 in)
Weight	11,3 kg (25 lbs)
External power supply	Input: 100 - 240 V  ; 50 - 60 Hz Output: 24 V  ; max. 3,75 A

Technical data are subject to change.

Notes

[illegible]

[illegible]

Notes

[illegible]

A member of  **ALTANA**

Download your manuals from:
<https://www.byk-instruments.com/p/5061>

BYK-Gardner GmbH

Lausitzer Strasse 8
82538 Geretsried
Germany

Tel +49 08171 3493-0
Fax +49 08171 3493-140

info.byk.gardner@altana.com
www.byk-instruments.com

