


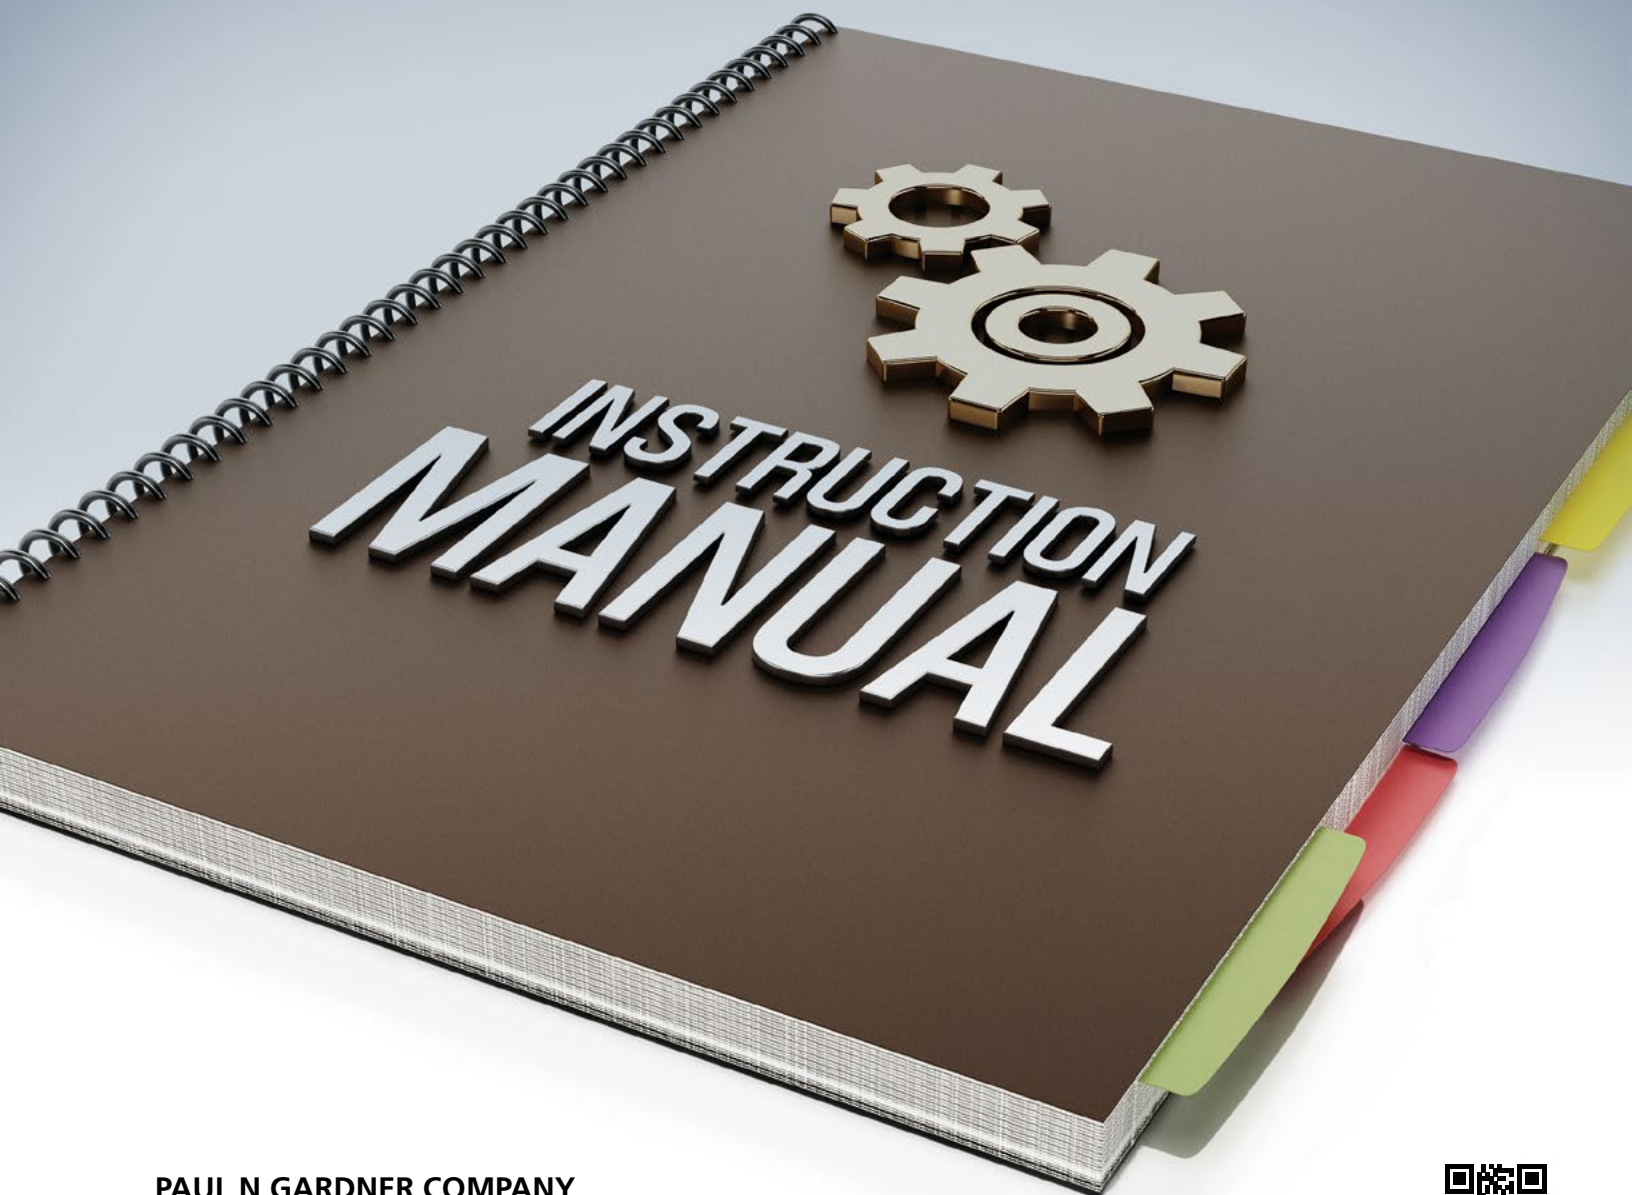

PAUL N GARDNER COMPANY
9104 GUILFORD ROAD, SUITE H
COLUMBIA, MD 21046 USA

EMAIL: GARDCO@ALTANA.COM
PHONE: +1-954-946-9454



INSTRUCTIONS

GARDCO DISTRIBUTED PRODUCTS



Wet Adhesion Test Roller Quick Start Manual

INSTRUCTIONS FOR USE

1. Apply the coating system to the substrate and allow to dry as specified in the product specification.
2. Immerse the test specimen in distilled water for 24 hours.
3. Remove the test specimen from the water and wipe dry with a soft cloth. Within 1 minute after removal from the water make two parallel scratches, one inch apart, through the coating to the metal with a stylus.
4. Immediately apply a 1" wide strip of the masking tape with the adhesive side down across the scratches.
5. Press the tape against the surface of the coating by passing the roller across the tape with two passes.
6. Remove the tape with one quick motion and examine for damage to the intercoat or surface adhesion.
7. Store the roller using the acrylic ring stand furnished; this protects rubber mat from flattening.

References:

Article number 12591 reference Federal Test method 141D and 141C
Article number 12595 reference ASTM D2510